



103063



103064



103122

Bedienungsanleitung**Wärmschränke**

Seite 1 bis 12

D/A/CH

Instruction manual**Hot cupboard**

from page 13 to 24

GB/UK

Mode d'emploi**Armoire chauffante**

de page 25 à page 36

F/B/CH

Bedieningshandleiding**Szafki do podgrzewania**

blz. 37 t/m 48

NL/B

Instrukcja obsługi**Warmkasten**

strony od 49 do 60

PL

ENGLISH

Table of contents

1. Safety 14
1.1 Safety instructions 14
1.2 Key to symbols 17
1.3 Proper use 18

2. General information 19
2.1 Liability and Warrantees 19
2.2 Copyright protection 19
2.3 Declaration of conformity 19

3. Transport, packaging and storage 20
3.1 Delivery check 20
3.2 Packaging 20
3.3 Storage 20

4. Technical data 21

5. Installation and operation 21
5.1 Installation 21
5.2 Operation 22

6. Cleaning 23

7. Waste disposal 24

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120



Read this instruction manual before using and keep them available at all times!

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

Please keep these instructions and give them to future owners of the device.

1. Safety

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

All persons using the device must follow the recommendations and instructions in this instruction manual.

1.1 Safety instructions

- The device is not intended for use by individuals (including children) with physical or mental disabilities, insufficient experience, and/or insufficient knowledge unless such persons are under the care of a person responsible for their safety or have received instructions regarding appropriate use of the device.
- Children should be observed to ensure that they are not playing with the device.
- **Never** leave the device unattended when in use.
- Only use the device indoors.
- The device is not adapted for use with an external timer or remote control.

- This device may only be operated in technically proper and safe condition.
- Prevent access of children to the package materials like plastic bags and foamed polystyrene elements. **Suffocation hazard!**
- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device. **Do not attempt to repair the device yourself.**
- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.



DANGER! Electric shock hazard!

To avoid the hazard results please follow the safety instructions below.

- Never allow the power cable to come into contact with heat sources or sharp edges. The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled. Never place the device or other objects on the power cable.
- Do not lay the power cable over carpets or other inflammable materials. Do not cover the cable. Keep away the cable from operating range and do not immerse it into water.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

- The supply cable must be disconnected from the socket only by pulling the plug.
- Never carry or lift the device by the supply cable.
- In any case do not open the device housing. In case of electrical or mechanical modifications the **electric shock hazard** will occur.
- Never immerse the appliance, the power cord and the power plug in water or other liquids; do not put it under running water and clean any parts of the appliance in the in the dishwasher.
- Do not use any acid agents and make sure no water ingresses the device.
- **Never** operate the device with moist hands or standing on wet floor.
- Remove the plug from its socket:
 - when the device is not used,
 - in case of anomalies during operation,
 - before cleaning.



HOT SURFACE! Burn hazard!

To avoid the effects of this risk, follow the safety instructions presented below.

- When in use parts of the device are very hot. To avoid burns, do not touch such elements of the device! Open the device using handles.
- If a temperature has been selected exceeding 60°C, use protective gloves or towels to remove plates so as to avoid burns of the fingers or hands.
- If the device is accessible by guests, ensure that the temperature regulator is not adjusted by unauthorized persons.

1.2 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



WARNING!

This symbol highlights hazards which could lead to injury.



WARNING!

This symbol highlights dangerous situations which could lead to injury or death.



HOT SURFACE!

This symbol is a warning that the device surface is hot when in use. Ignoring this warning may result in burns!



CAUTION!

This symbol highlights dangerous situations which could lead to light injuries, or damage, malfunction, and/or destruction of the device.



NOTE!

This symbol highlights recommendations and information aimed for effective and trouble-free device operation.

1.3 Proper use



CAUTION!

The device has been designed and built for commercial use and should be operated only by qualified personnel in kitchen facilities.

The operational safety of the device is assured only in case of proper use, according to the operation manual.

All technical activities like installation and maintenance must be performed by the qualified service personnel only.

The hot cupboard is intended only for heating and maintaining plates at the temperature selected.



CAUTION!

Any use going beyond the intended purpose and/or any different use of the device is forbidden and is not considered as conventional.

Any claims against the manufacturer or his authorized representative as a consequence of experiencing damages resulting from unconventional use are impossible.

The operator is liable for all damages resulting from inappropriate use.

2. General information

2.1 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology.



CAUTION!

Read this manual carefully and thoroughly before any operation of the device, and especially before turning it on!

Manufacturer **is not liable** for any damages or faults caused by:

- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

2.2 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



NOTE!

The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.

2.3 Declaration of conformity



The device complies with the current standards and directives of the EU. We certify this in the EC declaration of conformity. If required we will be glad to send you the according declaration of conformity.

3. Transport, packaging and storage

3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



NOTE!

If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

3.3 Storage

Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

- Do not store outdoors.
- Keep it dry and dust-free.
- Do not expose it to aggressive media.
- Do not expose it to direct sunlight.
- Avoid mechanical shocks and vibration.
- In case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly.
If required refresh or renew.

4. Technical data

Name	Hot cupboard		
Article no.:	103063	103064	103122
Construction:	1-door	1-door	2-door
	With adjustable shelf		
Material used for casing:	Stainless steel		
Voltage, frequency:	230 V~ 50 Hz		
Power:	750 W	400 W	1200 W
Temperature range:	0 °C - 85 °C		
Capacity:	55-60 plates, max. Ø 320 mm	25-30 plates, max. Ø 320 mm	110-120 plates, max. Ø 320 mm
Dimensions (mm):	Width 450	Width 400	Width 750
	Depth 450	Depth 400	Depth 450
	Height 855	Height 545	Height 855
Weight:	33.0 kg	24.0 kg	49.0 kg

We reserve the right to make technical changes!

5. Installation and operation

5.1 Installation

Positioning

- Unpack the device and remove all packing material.



CAUTION!

- **Never** remove the rating plate and any warning signs from the device.
- Put the device on an even, stable, dry and waterproof surface which is resistant to high temperature.
- **Never** place the device on a flammable surface.
- **Never** place the device near an open flame, electric ovens, heating ovens and other sources of heat.
- **Never** place the device in wet or humid places.
- Place the device so that the plug is easily accessible and can be quickly removed from its socket in case of necessity.

Connection



DANGER! Electric shock hazard!

The device can cause injuries due to improper installation! Before installation and connecting the local power grid specification should be compared with that of the device (see rating plate). Connect the device only in case of compliance! Connect the device only to properly installed single socket with protective terminal.

- The electrical circuit in the socket must be secured to at least 16A. Only connect the device directly to the wall socket; do not use any extension cords or power strips.

5.2 Operation

- Prior to first use, wash the unit (see **section 6 “Cleaning”**).
- Prepare appropriately-sized plates (\varnothing max. 320 mm). Prior to placing plates inside the unit, they should be washed and dried. Place plates on the appropriate shelves.



NOTE!

For best heating of plates, the shelves should be filled.

- Close the unit's door(s).
- Connect the unit to an appropriate outlet.
- Turn the unit on using the **ON/OFF** switch. The green control light will come on.
- Turn the temperature regulator to the right to attain maximum power.
- Various factors may influence warm-up time:
 - Composition and thickness of plates;
 - Number of plates in the unit;
 - Selected temperature;
 - Ambient temperature.
- For this reason it is not possible to give an exact heating time. Only when using the unit with the above factors accounted for can the user set the temperature appropriately.

- Set the desired temperature using the temperature regulator. The temperature range is from 0 °C to 85 °C, and the optimal temperature is approx. 60 °C. At temperatures up to 60 °C plates are not overly hot and can be handled without risk of burns. If food is served on plates at that temperature, it will stay warm for long periods.
- Plates can be removed from the unit as needed.
- Prior to removing plates from the unit always turn it off using the switch at the front of the unit.



HOT SURFACE! Burn hazard!

When in use parts of the unit are very hot. To avoid burns, do not touch such elements of the unit! Open the unit using handles.

- Prior to placing plates inside the unit, turn it off. While placing plates inside the unit, ensure they are clean and dry. If any water gets on the unit's surface, wipe it away immediately.



WARNING! Danger of injury!

Never use the unit if any liquids are on or inside the unit.

To avoid injury by electric shock, fire or otherwise, do not touch the unit if it has been damaged. In such an event, immediately disconnect the unit from its power source by removing the plug from its socket.

- If the unit contains no plates or it is not to be used, disconnect it from its power source by removing the plug from its socket.

6. Cleaning



CAUTION!

Disconnect the device from the power supply (unplug!) before cleaning.

The device is not designed to be rinsed with running water.

Do not use a pressure washer to clean the device!

Be careful and do not let the water into the device.

- Wash the unit regularly.
- Wash the casing, door(s) and shelves with a soft, moist cloth and delicate washing-up liquid. Dry thoroughly with a soft cloth.

- Only use a soft cloth and make sure you **never** use any kind of abrasive agents or pads which could scratch the surface.
- After the cleaning procedure, you should use a soft and dry cloth to wipe dry and polish the surface.
- Make sure the device has been cleaned properly before storing it in a dry place.

7. Waste disposal

Discarding old devices

At the end of its service life the discarded device has to be disposed in accordance with the national regulations. It is advisable to contact a company which is specialized in waste disposal, or just contact the local disposal service in your community.



WARNING!

To exclude any abuse and the dangers involved make the waste device unfit for use before disposal. For that purpose disconnect device from mains supply and remove mains connection cable from the device.



CAUTION!



For the disposal of the device please consider and act according to the national and local rules and regulations.