

**FLAP GRILL – ELECTRIC CLAM**  
**FLAP GRILL – DOUBLE ELECTRIC CLAM**  
**FLAP GRILL - DOUBLE ELECTRIC CLAM - 1 FLAP**



**CGRCB - CGRCDB - CGRCD1RB**

# SUMMARY

## **1. PRESENTATION**

- 1.1 Information
- 1.2 Description of symbols
- 1.3 Copyright
- 1.4 Declaration of conformity
- 1.5 Guarantee

## **2. SECURITY**

- 2.1 General
- 2.2 Intended use
- 2.3 Safety instructions when using the device

## **3. TRANSPORTATION, PACKAGING AND STORAGE**

- 3.1 Inspection after transport
- 3.2 Packaging
- 3.3 Storage

## **4. MATERIAL CHARACTERISTICS**

## **5. FACILITY AND USE**

- 5.1 Safety instructions
- 5.2 Use

## **6. CLEANING AND MAINTENANCE**

- 6.1 Safety instructions
- 6.2 Cleaning
- 6.3 Maintenance Safety Instructions

## **7. OPERATING IRREGULARITIES**

# 1. PRESENTATION

## 1.1 Information

This instruction manual serves as information for all its users. It describes the installation and handling of the device. The safety instructions and technical knowledge of the device are detailed in this manual. They are essential conditions for the proper use of professional equipment.

Each user must scrupulously respect all the instructions for use. This user manual must be kept next to the product for proper use and access to the instructions at all times for each user.

## 1.2 Description of symbols

Information, advice on use and safety instructions are represented by symbols. It is essential to follow these instructions in order to avoid material damage and bodily injury.

### WARNING

This symbol means that a hazard exists that could lead to personal injury. Concentration and caution are imperative to operate this device.

### ELECTRICAL HAZARD

This means that there is a danger related to electric current. Failure to follow the instructions can lead to the risk of injury and death.

### WARNING

This symbol is used to indicate that non-compliance with the instructions may lead to a breakdown or the destruction of the device.

### **REMARK**

This symbol indicates good practices and advice that must be applied for efficient use of the device.

### **REMARK**

It is essential to read this user manual before commissioning the device. We do not accept any liability for damage and breakdowns resulting from non-compliance with the instructions for use. The Casselin company reserves the right to make any technical, informative or marketing changes to our product without notice.

## 1.3 Rights of author

The user manual is protected by copyright law. Reproductions of any kind and in any form – even partial – as well as the exploitation and/or transmission of its contents are not permitted without our permission. Any violation of these provisions entitles you to damages. Other rights remain reserved.

## 1.4 Declaration of Conformity

The device corresponds to the current standards and directives of the European Union. We confirm this in the CE declaration of conformity.

## 1.5 Warranty

The instructions given in this user manual have been drawn up taking into account the regulations in force, current technical development, our knowledge and experience. All translations have been professionally prepared. However, we decline all responsibility in the event of a translation error. The attached French version is authentic.

# 2. SECURITY

Safety instructions serve to avert dangers. They are mentioned in the individual chapters and are characterized by symbols. Observance of these guarantees optimum protection against risks and enables

ideal operation of the device. The safety instructions must be available and legible on the devices.

## 2.1 Principles

The safety instructions are established to avoid errors, dangerous uses and breakdowns. Therefore, the device must not be modified or used for improper use. The device is designed according to technical rules currently being developed. This notice must be kept. The appliance must only be used in premises provided for this purpose by a responsible person who is familiar with the operation of the appliance.

## 2.2 Intended use

The operation of the device and the safety of use are only guaranteed in the event of normal and compliant use of the device. Assembly and technical interventions must be carried out by professionals.

### WARNING

Any other use is considered improper. Any charges related to improper use of the device are not admissible and will be forfeited. Proper use corresponds to use described in this user guide. Proper use corresponds to compliance with safety, hygiene, cleaning and maintenance rules.

## 2.3 Safety instructions when the use of the device

The indications relating to occupational safety refer to the regulations of the European Union valid at the time of manufacture of the device. For commercial use of the device, the operator undertakes, throughout the duration of its use, to note the conformity of the measures cited in terms of work safety with the current state of the arsenal of advice and to comply with the new regulations.

For countries outside the EU, the laws and provisions of the country must be observed. All environmental protection provisions must also be observed.

### WARNING

The device must be handled by people with sufficient physical and intellectual means. People with limited physical and intellectual means must be supervised to use this device. Use prohibited for children and minors (exceptions made within a legal framework provided for by law)

If the device is used by a third party, the instructions for use must be available before any use. Any new user must have read the instructions for use.

The device must only be used in rooms intended for this purpose.

## 3. TRANSPORT, PACKAGING AND STORAGE

### 3.1 Inspection after transport

Verification of the absence of damage and the integrity of the device must be carried out upon receipt of the package. In the event of identification of damage due to transport, refuse or accept the product delivered only under reserve \*. A complaint detailing the defects observed must then be made. The perception of damages is only possible in the event of a complaint formulated within the time limits provided, ie 24-48 hours at the most.

\* written on the right paper or digital delivery from the carrier.

### 3.2 Packaging

The packaging of the device must be kept in the event of a move, or for a return to the after-sales service. The interior and exterior packaging must be completely removed before using the device. The standards in force in your country concerning the protection of the environment must be respected before destroying the packaging.

### 3.3. Storage

#### WARNING

The storage of the device in stock can be done but only in its original closed packaging.

Storage can be carried out under these conditions:

- Storage in a dry, non-humid place
- Sheltered from the sun
- Control of stock for more than 2 months (general condition of the device and all the elements that make it up)
- No material shaking
- Storage in a closed room and not outside.

## 4. MATERIAL CHARACTERISTICS

\* Subject to change

Model	<b>CGRCB</b>	<b>CGRCDB</b>
Plate coating	Chrome	Chrome
Tension	230V	400V + 230V
Powerful	6000W	12,000W
plate thickness	10mm	10mm
Upper plate thermostat	50°C to 220°C	50°C to 220°C
Lower plate thermostat	50°C to 300°C	50°C to 300°C
Top plate dimensions	W 320 x D 380 mm	2 x W 320 x D 380 mm
Bottom plate dimensions	W 320 x D 480 mm	W 650 x D 480 mm
Dimensions	W 330 x D 660 x H 400 mm	W 660 x D 660 x H 400 mm
Weight	41.4kg	79.2kg

Model	<b>CGRCD1RB</b>
Plate coating	Chrome
Tension	400V + 230V
Powerful	9000W
plate thickness	10mm
Upper plate thermostat	50°C to 220°C
Lower plate thermostat	50°C to 300°C
Top plate dimensions	W 320 x D 380 mm
Bottom plate dimensions	W 650 x D 480 mm
Dimensions	W 660 x D 660 x H 400 mm
Weight	60kg

## 5. INSTALLATION AND USE

### 5.1 Safety instructions

#### ELECTRICAL HAZARD

Danger due to electric current!

- No contact with heat sources should take place with the electrical cord.
- The cord should not hang over the edge of a table or counter.
- Do not pour water into the appliance when it is running or still hot.
- The device must be properly connected and comply with the regulations in force.

#### WARNING

While operating, the device can reach high temperatures. To avoid burns and accidents, do not use the device if it is malfunctioning, and do not use non-original spare parts.

#### ELECTRICAL HAZARD! Danger due to electric current!

If incorrectly installed, the device can be dangerous and cause injury. Before any installation, check the data of the electrical network. Connect the device only when there is compliance. The device must be unpacked and fully checked before connection by a professional.

### **ELECTRICAL CONNECTION**

#### ELECTRICAL HAZARD! Danger due to electric current!

The device can cause injury if not properly installed. Before proceeding with its installation, compare the data of the local electrical network with the indications which appear on the nameplate of the appliance.

- Connect the device only if there is conformity.
- Comply with safety rules.

Before connecting the device, make sure that the nominal voltage and frequency listed on the nameplate comply with the values of the local electrical network: the maximum voltage difference must be plus or minus 10%.

The device must be earthed.

Place the device so that the socket is easily accessible in order to unplug the device if necessary.

### 5.2 Use

#### WARNING

The setting up of the device installation and maintenance should only be carried out by professionals.

- Do not leave the appliance running without watching it.
- During use, your hands must be dry.
- Do not move or tilt the device during operation.

The Casselin company declines all responsibility in the event of non-compliance with the safety, hygiene and electrical standards in force when using the device.

## MANUAL

### **COMMISSIONING**

The device must be completely removed from its packaging and the protections must be completely removed. Place the device on a solid, stable, flat and non-flammable surface.

Place the device under an extractor hood.

Do not lean the device against the wall. In the event of a short distance from a wall, ensure that the latter resists a minimum temperature of 90°C.

Do not install the device near open fires or other heating devices.

It is forbidden to place flammable objects on or near the device.

Make sure that all ventilation openings are not blocked.

Make sure the device is positioned for optimal use.

The device must be electrically protected upstream with an appropriate safety device.

The device must be plugged directly into a wall socket and not into a power strip.

Let the appliance warm up for 15 minutes before first use.

### **USE**

Before first use, the device must be cleaned with a damp cloth and mild detergent and dried completely.

#### **Lower part :**

Switch on the device using the main switch. The green power-on indicator light comes on.

Turn the thermostat knob to the desired temperature. The orange indicator light comes on when the resistances heat up and goes off when the desired temperature is reached. To turn off the appliance, position the thermostat button on "0" and press the main switch.

After use, allow the device to cool down.

Check and empty the grease trap regularly.

#### **The top part :**

Switch on the device using the main switch which lights up green when the power is switched on.

Turn the thermostat knob to the desired temperature. The orange indicator light comes on when the resistance heats up and goes off when the desired temperature is reached. To turn off the appliance, position the thermostat button on "0" and press the main switch.

 
After use, allow the device to cool down.

## Digital Timer Operation Instruction

The timer does not control the power supply, it allows you to view the time remaining and warns when the preset cooking time has elapsed.

### 1) Marketing / Stopping


Use the ON/OFF button

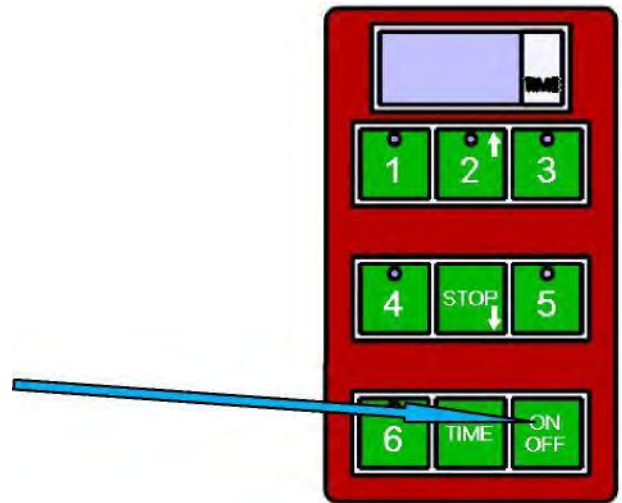

### 2) To choose a preset time

This timer has 5 basic preset times. These can be selected using keys 1 to 5 as follows:

 - 1- For example time for burgers
- 2- For example time for fish
- 3- Like time for a rare steak
- 4- For example the time for a medium steak
- 5- For example the time for a well-done steak

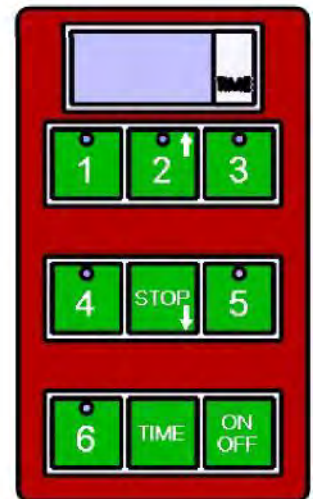

At the end of the preset time, the timer notifies you by beeping.

This acoustic signal stops automatically after approximately 1 minute, but you can also stop it manually by pressing the STOP button.

A small red light flashes on the screen for the duration of the ringtone.

### Program interrupt

You can interrupt the preset program at any time by pressing the STOP button.

## 6. CLEANING AND MAINTENANCE

### 6.1 Safety instructions

Any maintenance, cleaning, repair of the appliance must be done with the appliance unplugged (isolated from all electrical sources).

The use of caustic detergents and baking soda for cleaning is prohibited. Water must not get inside the device.

Never immerse the appliance in water or any other liquid.

Use the Casselin brand products provided for this purpose.

#### WARNING

The device cannot be cleaned with a direct water jet (no pressurized water jet).

### 6.2 Daily maintenance

Unplug the device

Clean the device with warm water and a clean cloth after each use.

After cleaning, use a soft, dry cloth to polish and dry the device. All parts must be dried.

Store the device in a dry place.

#### **Plate cleaning:**

- reheat the plate
- turn off and unplug the device
- scrape with a plastic spatula
- use water with a non-abrasive, non-corrosive cleaner and scourer
- rinse with clean water
- dry and polish with a soft cloth

### 6.3 Safety instructions for the maintenance of the device

Daily check that the power cord is not damaged. Never use the appliance when the cord is damaged. If the cord has any faults, it must be replaced by a qualified technician.

In the event of a fault, contact your dealer.

Any maintenance or repair work should only be carried out by a professional.

 
 
 
 
 
 
#### **REMARK**

In the event of a trip, unplug the appliance, let it cool down and contact your retailer. If the unit does not start, check your power cord. The device must not be plugged into a power strip but directly into a wall socket. For any other anomaly, contact your dealer.

#### **REMARK**

Waste from used appliances: all used appliances must, when disposed of, comply with the regulations in force in their country\*. It is imperative to make the device unusable before disposal by removing the power supply cable.

*\* in terms of ecology and recycling*

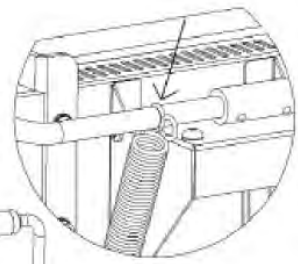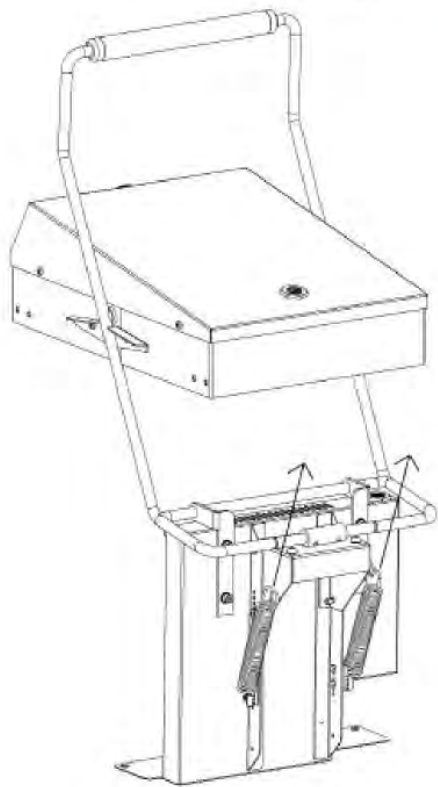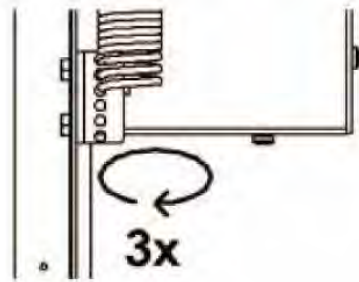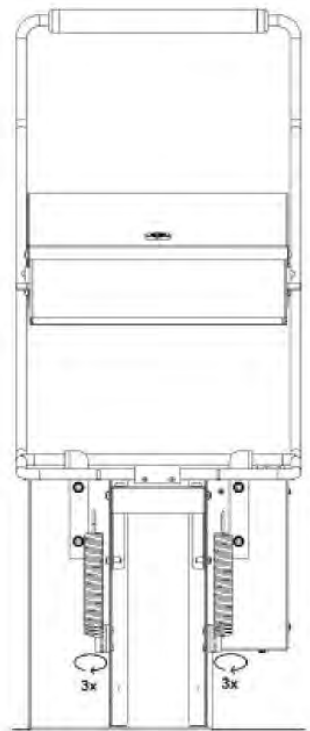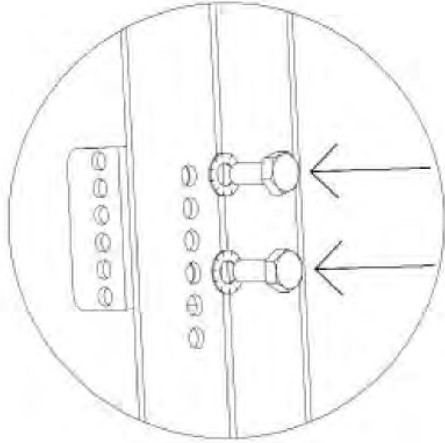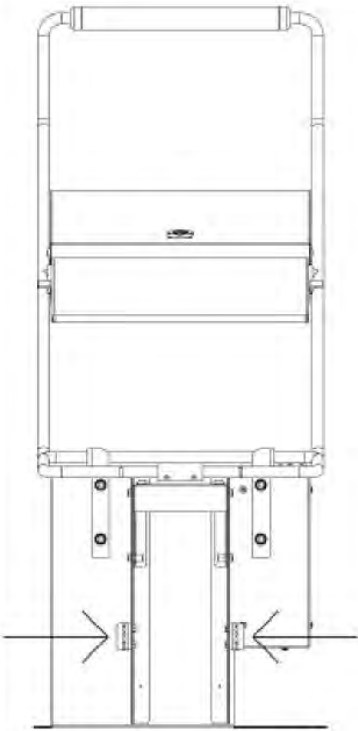

## 7. IRREGULAR OPERATION

ANOMALY	CAUSES	EXPLANATION
<p>The appliance does not work, the heating indicator light does not come on.</p>	<ul style="list-style-type: none"> <li>&gt; The power cable is not plugged in.</li> <li>&gt; The power supply fuse has tripped.</li> <li>&gt; The power supply box does not work.</li> <li>&gt; The safety thermostat has tripped.</li> <li>&gt; The safety thermostat is damaged.</li> </ul>	<ul style="list-style-type: none"> <li>&gt; Connect the power cable properly.</li> <li>&gt; Check all of your fuses.</li> <li>&gt; Check the location of the box.</li> <li>&gt; Press the reset button located in the housing.</li> <li>&gt; Contact your dealer.</li> </ul>
<p>The device is on but not heating. The heating indicator lamp remains off.</p>	<ul style="list-style-type: none"> <li>&gt; The safety thermostat has activated.</li> <li>&gt; The resistor no longer works.</li> <li>&gt; Contact with damaged heating element.</li> </ul>	<p>Contact your dealer.</p>
<p>The requested temperature is not reached.</p>	<p>The thermostat is damaged.</p>	<p>Contact your dealer.</p>
<p>The heating element switches off after a certain time.</p>	<p>The safety thermostat has started.</p>	<p>Press the Reset button in the distribution box.</p>

### **REMARK**

The malfunctions mentioned above are only cited as an indication and remain virtual. If you have any doubts, contact your dealer.