



Referencia	Artículo	Uds. por caja
31225-532	Plato Llano 22,5 cm.	24
31250-536	Plato Llano 25 cm.	24
31270-538	Plato Llano 27 cm.	12
31305-543	Plato Llano 30,5 cm.	12
32225-520	Plato Hondo 22,5 cm.	24
33190-530	Plato Postre 19 cm.	24
33210-531	Plato Postre 21 cm.	24
34165-528	Plato Pan 16,5 cm.	36



42130-514	Ensaladera 13 cm.	36
42165-518	Ensaladera 16,5 cm.	36
42180-519	Ensaladera 18 cm.	24
42230-523	Ensaladera 23 cm.	24



Referencia	Artículo	Uds. por caja
37080-580	Taza 0,08 L.	24
37100-570	Taza 0,10 L.	36
37160-500	Taza 0,16 L.	36
37190-506	Taza 0,19 L.	36
37220-501	Taza 0,22 L.	36
37300-517	Taza Consomé 0,32 L.	24
35130-572	Platillo 13 cm.	36
35145-512	Platillo 14,5 cm.	36
35165-515	Platillo 16,5 cm.	36
37014-524	Bowl 14 cm.	36
37030-516	Bowl 0,30 L. Con orejas	24



43300-780	Sopera 2,70 L	4
43301	Tapa Sopera	

Referencia	Artículo	Uds. por caja
41240-5112	Rabanera 24 cm.	24
40290-558	Fuente 29 cm.	12
40330-560	Fuente 33 cm.	12
40370-562	Fuente 37 cm.	6



45030-573	Cafetera 0,30 L	12
45100-576	Cafetera 1,00 L	12
45031	Tapa Cafetera 0,30 L.	
46015-5003	Lechera 0,15 L	36
46030-5005	Lechera 0,30	36
47040-5020	Tetera 0,40 L	12
47060-5021	Tetera 0,60L	1
47041-5019	Tapa Tetera 0,40 L	
47061	Tapa Tetera 0,60 L	