



Referencia	Artículo	Uds. por caja
131225-2432	Plato Llano 22,5 cm.	24
131250-2436	Plato Llano 25 cm.	24
131270-2438	Plato Llano 27 cm.	12
131305-2443	Plato Llano 30,5 cm.	12
132225-2420	Plato Hondo 22,5 cm.	24
133210-2431	Plato Postre 21 cm.	24
134165-2428	Plato Pan 16,5 cm.	36



142130-2414	Ensaladera 13 cm.	36
142165-2418	Ensaladera 16,5 cm.	36
142180-2419	Ensaladera 18 cm.	24
142230-2423	Ensaladera 23 cm.	24



Referencia	Artículo	Uds. por caja
135130-2472	Platillo 13 cm.	36
135145-2427	Platillo 14,5 cm.	36
135165-2415	Platillo 16,5 cm.	36
137080-2470	Taza 0,08 L.	36
137100-2480	Taza 0,10 L.	36
137160-2401	Taza 0,16 L.	36
137190-2407	Taza 0,19 L.	36
137220-2406	Taza 0,22 L.	36
137320-2209	Taza 0,32 L.	
137300-2417	Taza Consomé 0,32 L.	24
137014-2424	Bowl 14 cm.	24



143300-0364	Sopera 3,00 L.	4
143301	Tapa Sopera	

Referencia	Artículo	Uds. por caja
141240-2408	Rabanera 24 cm.	12
140290-2458	Fuente 29 cm.	12
140330-2460	Fuente 33 cm.	12



55030-2273	Cafetera 0,30 L.	12
55075-2274	Cafetera 0,75 L.	12
55076-2232	Tapa Cafetera 0,30 L.	
56005-2205	Lechera 0,05 L.	
56015-2204	Lechera 0,15 L.	24
56030-2205	Lechera 0,30 L.	24
55400-2222	Tetera 0,40L.	12
55425-2223	Tetera 1,25 L.	
55401-2240	Tapa Tetera 0,40 L.	