


# MAXIMA

## DIGITAL MICROWAVE OVEN

30 L / 1800 W

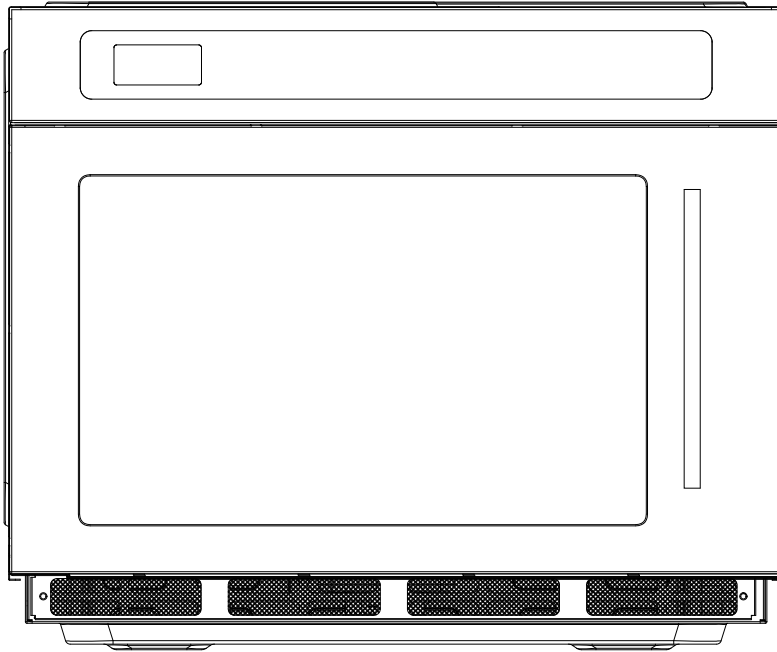

## USER MANUAL

BEFORE USING THIS PRODUCT YOU SHOULD READ THIS USER MANUAL PROPERLY





## ENGLISH

### Introduction

Thank you for purchasing this Maxima product. To ensure optimal and safe use, please read these instructions completely before attempting to install or use this product

All Maxima products are manufactured with great care and are CE certified. As a result, our products meet the legal requirements within the European Union with regard to safety, health and the environment. In addition, our products are tested and inspected prior to shipment to ensure product quality and safety.

The Maxima Microwave Ovens are professional grade appliances which are ideally suited to quickly heat-up or defrost food products. Maxima Microwave Ovens are low-maintenance, safe and easy to use.

At Maxima we are very proud of our products and are completely committed to providing you with the best products and service possible. Your satisfaction is our number one priority.

We trust you will enjoy using this product and Thank You for choosing Maxima Kitchen Equipment as your supplier. We hope you will consider Maxima for your future purchases.

## Specifications

<b>Name</b>	<b>Maxima Digital Microwave</b>
<b>Model</b>	30L / 1800 W
<b>Product Code</b>	09367020
<b>Power Supply</b>	230 V / 50 Hz
<b>Power Consumption</b>	1400 W (single magnetron) 2800 W (double magnetron)
<b>Rated Microwave Power Output</b>	900 W (single magnetron) 1800 W (double magnetron)
<b>Operating Frequency</b>	2450 MHz
<b>Net Weight</b>	Approx. 34.5 kg
<b>Dimensions</b>	(H) 405 × (W) 490 × (D) 637 mm
<b>Chamber Dimensions</b>	(H) 224 × (W) 374 × (D) 378 mm
<b>Capacity</b>	30 Liters

## General Safety Regulations

This machine may only be used for the purpose for which it was designed and intended. The manufacturer and supplier are not liable for any damage caused by incorrect operation and improper use.

- This is a commercial product and must only be used by a trained professional who has read and fully understands this manual. It must not be used by children or persons with reduced physical, sensory or mental capabilities.
- This device is to be used indoors only.
- **WARNING!** Keep the machine and electrical plug away from water and other liquids. If either is exposed to a liquid, immediately disconnect the power supply and have the machine checked by a certified technician. Not following these instructions may cause electric shock, or even death.
- Do not use the machine after it has fallen or is damaged in any other way. Have it checked and repaired by a certified technician.
- Do not move the appliance while operational.
- Never try to move or carry the machine by the power cord.
- Do not place or move the machine on its side, upside-down or tilted (more than 45°).
- **ATTENTION!** Do not try to alter, modify or repair the machine yourself. This may void warranty or cause hazardous situations.



- Do not try to open the casing of the machine.
- Do not insert any objects in the casing or openings of the machine.
- Do not use any extra devices or accessories that are not supplied along with the machine.
- Never put your hands or other body parts near the moving parts of the machine while operational.
- Always keep an eye on the machine when in use.
- Keep all packaging away from children.
- Dispose of packaging in accordance with local, state and national regulations.
- Avoid overloading the machine.
- The electrical installation must satisfy the applicable local, state and national regulations.
- Switch off the machine before pulling the power plug out of the socket.
- Always disconnect the power supply when the machine is not in use. To pull the plug out of the socket, always pull on the plug and not on the cable.
- Do not touch the power plug with wet or damp hands.
- Keep the power cable away from operating range and do not cover the cable.
- Make sure the power cable does not come in contact with sharp or hot objects and keep away from open fire.
- **ATTENTION!** As long as the power plug is in the electrical socket the machine is connected to the electric grid.

#### Product Specific Safety Regulations

- This machine may only be used for its intended purpose: **Cooking, steaming or defrosting food products.**
- Under no circumstance should you place living creatures inside the microwave. Exposure to electromagnetic radiation emitted inside the appliance may cause serious injury or even death.
- Keep machine away from flammable materials, liquids and gasses.
- **WARNING!** High temperatures. Handle with care or risk serious injury.
- Do not attempt to operate the microwave with the door open or risk exposure to harmful electromagnetic radiation.
- Do not operate the oven when empty.
- Only use microwave safe containers, tableware and utensils in combination with this device.
- Never operate the microwave with any kind of metal inside (including aluminium foil).
- **WARNING!** Liquids or other food must not be heated in a sealed container for risk of explosion.



- Do not attempt to fry food by using oil inside de microwave. Hot oil can damage oven parts or cause serious burns.
- Do not attempt to cook eggs while still in their shell.
- Pierce food with a thick or tough skin, using a fork or knife before cooking.
- Handle the ceramic plate with care, it is fragile.

### First Time Use


- Unpack and inspect your machine immediately after receipt. If there are any latent defects or damage to the machine then immediately contact your supplier. Save all packaging materials in case the machine needs to be returned or inspected by the freight carrier.
- Remove any protective film from all surfaces (if applicable).
- Read this instruction manual completely before attempting to install and operate this product. When in doubt, contact your supplier.
- If your machine is supplied with a factory fitted molded plug then you may plug the unit into a standard electrical outlet. Make sure that the voltage of the machine and the wall outlet are compatible. If your machine is not supplied with a factory fitted molded plug then a qualified electrical engineer must be contracted to wire the unit to the power supply.
- Before using the appliance for the first time, it is recommended to clean the appliance according to instructions (see chapter "*Cleaning and Maintenance*").

### Installation

1. The machine must be positioned on a flat and stable surface which can support the weight of the microwave oven and any products placed inside.
2. Choose a surface where the machine is not exposed to direct sunlight, or close to a direct source of heat such as a cooker, oven or radiator.
3. When positioning the appliance, maintain a distance of at least 10cm (4 inches) between the appliance and walls or other objects for ventilation and ease of use. Do not place the microwave inside a cabinet.
4. Position the machine in such a way that the plug is accessible at all times.
5. Assemble any required parts (if applicable).
6. Place the ceramic plate inside the cooking chamber (optional). Gently slide the plate in the designated groove. Make sure the warning sign is face up and facing to the front.
7. Plug the power plug into a grounded and compatible socket.

## General Operation

- When the appliance is powered on, the blue backlight is lit and the display [1] will show “0”. This is also considered to be “Standby” mode. The system will automatically return to standby mode if there is no activity for 30 seconds.
- Place your product in a microwave safe container. Round or oval shaped containers are recommended, this helps cook the product more evenly.
- Open the door and place the item in the middle of the chamber, then close the door.
- Select the desired power level using the “POWER LEVEL” key [3] on the control panel. Press the key to change setting to High (HI) 100%, Medium (MED) 80% or Defrost (DEF) 30%.
- Select the desired cooking time or preset cooking program using the number pad [2] on the control panel. During operation the cooking time can be adjusted using the “TIME +/-” keys [4].
- During the cooking program you can press the “STOP/RESET” key [5] to pause the program, press “START” [6] to resume and press “STOP/RESET” [5] twice to cancel the program.
- When the timer has finished a “0” will flash on the display [1] and 4 beeps will sound. To remind you the program is finished, the beep will continue to sound every two minutes until you press any key or open the door.
- Open the door and remove the product. **WARNING!** The product and/or container may be very hot, handle with care or risk serious injury. Using protective gloves is recommended.
- Clean the appliance after use (see chapter “Cleaning and Maintenance”).
- If the appliance will not be used for a longer period, please remove the plug from the main socket

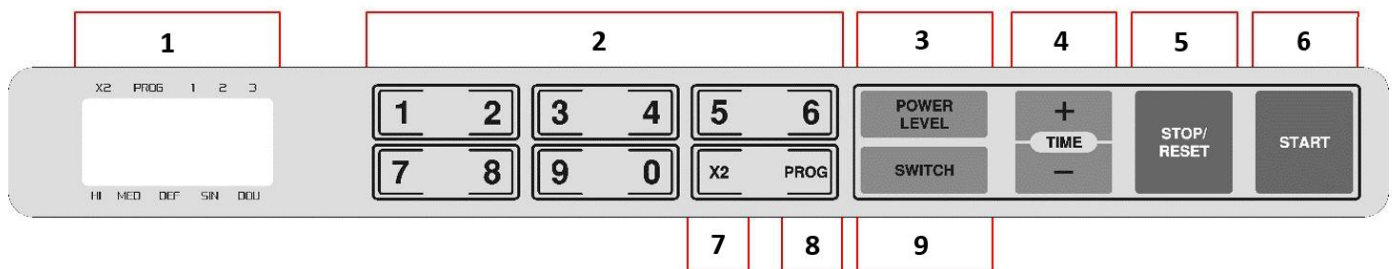

## Extra Features

### ✓ DUAL MAGNETRON

This appliance is fitted with two microwave transmitting magnetrons. By pressing the “SWITCH” key [9] the user can choose to activate a single magnetron for reduced power consumption or both magnetrons for increased power output. **NOTE:** Both magnetrons need to be activated when also using the ceramic plate.

### ✓ COOKING PROGRAMS & PRESETS

Frequently used cooking programs can be saved as presets to speed-up operation. To activate a preset, simply press the number and then press “START” [6]. The following default programs are pre-installed to each number on the keypad.

Key:	1	2	3	4	5	6	7	8	9	0
Cooking Time:	00:10	00:20	00:30	00:45	01:00	01:30	02:00	02:30	03:00	03:30
Power Level:	HI	HI	HI	HI	HI	HI	HI	HI	HI	HI

The user is free to change the presets as desired. Any preset may contain up to three consecutive cooking stages, each with their own power level and/or cooking time. To change presets follow below steps:

1. While in “standby” mode press “PROG” key [8] once.
2. Press the number key to which you wish to save the program.
3. Press “POWER LEVEL” key [3] to select power level.
4. Use the keypad [2] to select the desired cooking time.
5. (Repeat steps 3 and 4 before saving to set multiple stages).
6. Finally press “PROG” key [8] again to save program.

Additional presets can be stored using X2 mode. However, these presets can only contain one cooking stage. In X2 mode the following default programs are pre-installed:

Key:	1	2	3	4	5	6	7	8	9	0
Cooking Time:	00:20	00:40	01:00	01:30	02:00	03:00	04:00	05:00	06:00	07:00
Power Level:	HI	HI	HI	HI	HI	HI	HI	HI	HI	HI

To change X2 presets follow the below steps:

1. While in standby mode press “PROG” key [8] once.
2. Press “X2” key [7] once.
3. Press the number key [2] to which you wish to save the program.
4. Press “POWER LEVEL” key [3] to select power level.
5. Use the keypad [2] to select the desired cooking time.
6. Finally press “PROG” key [8] again to save program.

### ✓ ONE TOUCH ACTIVATION

If you want the program to start immediately after you have selected a preset (without also having to press the “START” key), press and hold the “STOP/RESET” key for five seconds until “P L” appears in the display. To deactivate this feature, again press and hold the “STOP/RESET” key for five seconds until “P” appears in the display.

### ✓ COUNT FUNCTION

Keep track of usage with the count function. While in standby mode, press and hold “STOP/RESET” and “POWER LEVEL” key simultaneously. The number on the display shows how many times the appliance has been used.

### ✓ CHILD LOCK

This allows you to lock the oven from unwanted use. In locked mode all key’s are disabled.

1. While in standby mode, press and hold “PROG” key for 5 seconds.
2. A beep will sound and the lock icon will appear on the display.
3. Press and hold “PROG” key for 5 seconds again to deactivate lock mode.



#### ✓ RESTORE FACTORY DEFAULT SETTINGS

To restore all settings to factory default follow below steps:

1. Press and hold "START" and power on. All symbols will light-up and "00:00" will appear on the display.
2. Next, press "1, 2, 3, 4, 5, 6, 7, 8, 9, 0, POWER LEVEL, X2, PROG, SWITCH,+,-, STOP/RESET, START" keys consecutively and "00:18" will appear on the display.
3. Open the door, then shut it and open the door again. A beep will sound and the oven will return to standby mode ("0" on display). Factory default settings have now taken effect.

#### **Cleaning and Maintenance**

- Maintenance and repairs should only be done by a certified technician.
- Regularly check and clean the appliance, its parts and accessories (if applicable).
- Regularly check the power plug and power cable for damage. If either is damaged do not use the appliance. Instead, have it repaired by a certified electrical engineer.
- Always switch off and disconnect the power supply before cleaning or maintenance.
- Let the appliance cool down before cleaning or maintenance.
- **ATTENTION!** Never use aggressive cleaning agents or abrasives. Do not use solvents or petrol based cleaning agents. Some cleaning agents may leave harmful residues or cause damage to the machine. Use a food safe detergent instead.
- **ATTENTION!** Do not use any scourer and sharp or pointed objects during cleaning, this may cause damage to the machine.
- **ATTENTION!** Never hose down the machine or immerse it in water or any other liquid. Do not use a steamer to clean the appliance.
- **ATTENTION!** Never let the power cable or power plug get wet or damp.
- Clean the interior and exterior using a damp cloth with food safe detergent. The ceramic shelf can be removed for easy cleaning. The ceramic shelf can be washed in warm soapy water or dishwasher. Always dry the appliance, parts and accessories after cleaning using a soft cloth.

#### **Storage**

- Make sure the appliance is cleaned properly before storage.
- Coil up the power cable and put it away.
- Store in a cool and dry place.

#### **Discarding**

- When discarding the appliance, do so in compliance with local, state and national regulations.



## Guarantee

Thank you for using our products, our company will follow related provisions from our "Algemene Voorwaarden", and provide you services when you can show us the invoice.

We provide 12-month warranty from the date of purchase (invoice date). In the warranty period, our company is responsible for free parts if there is a device fault or quality problem of spare parts under correct operation.

The following is not included in the free service:

1. Damages result from transportation, installation, improper connections.
2. Component damages caused by failing to provide power and voltage as required in technical data.
3. Damages caused by disassembling products, adjust or change the mechanical and electrical structures without permission.
4. Damage caused by improper operation, cleaning and maintenance.
5. Non-man-made damage, such as damages from abnormal voltage, fire, building collapse, lightning, floods and other natural disasters, and damages from rats and other pests.
6. Failure in following the manual when operating.
7. Wearable and expendable parts.
8. Altered invoice or without invoice.

In line with our policy of continuous development, we reserve the right to alter the product, the packaging or the documentation without prior notice.