



**11,36€**  
**Plato Presentación 3000 ø31 cm**  
*Show Plate 3000 ø12,2"*  
Peso/Weight 1.081 gr  
U. Caja/U. Box 6  
0003300060000

**6,50€**  
**Plato Llano ø26 cm**  
*Flat Plate ø10,24"*  
Peso/Weight 680 gr  
U. Caja/U. Box 24  
0003400020002

**6,31€**  
**Plato Llano ø24 cm**  
*Flat Plate ø9,45"*  
Peso/Weight 603 gr  
U. Caja/U. Box 24  
0003400050002

**5,56€**  
**Plato Hondo ø23 cm**  
*Deep Plate ø9,06"*  
Peso/Weight 489 gr  
U. Caja/U. Box 24  
0003400110002

**4,42**  
**Plato Postre ø20 cm**  
*Flat Plate ø7,87"*  
Peso/Weight 371 gr  
U. Caja/U. Box 24  
0003400220002

**3,84€**  
**Plato Pan ø16 cm**  
*Flat Plate ø6,3"*  
Peso/Weight 208 gr  
U. Caja/U. Box 24  
0003400310002

**3,40€**  
**Rabanera 16 x 8,5 cm**  
*Rectangular Tray 6,3 x 3,35"*  
Peso/Weight 167 gr  
U. Caja/U. Box 20  
0003400720002

**10,59€**  
**Fuente 28 x 19 cm**  
*Rectangular Tray 11,02 x 7,48"*  
Peso/Weight 812 gr  
U. Caja/U. Box 6  
0003400750002

**9,40€**  
**Jarra N° 1 145 cc.**  
*Creamer N° 1 4,90 oz*  
Peso/Weight 163 gr  
U. Caja/U. Box 24  
0003400400002

**11,36€**  
**Jarra N° 2 250 cc**  
*Creamer N° 2 8,45 oz*  
Peso/Weight 271 gr  
U. Caja/U. Box 12  
0003400410002

**4,89€**  
**Bol Consomé 320 cc**  
*Consomme Bowl 10,82 oz*  
Peso/Weight 330 gr  
U. Caja/U. Box 24  
0003400540002



**4,13€**  
**Taza Desayuno 230 cc**  
*Breakfast Cup 7,78 oz*  
Peso/Weight 266 gr  
U. Caja/U. Box 24  
0003400530002

**3,75€**  
**Taza Té 190 cc**  
*Tea Cup 6,42 oz*  
Peso/Weight 250 gr  
U. Caja/U. Box 24  
0003400520002

**3,03€**  
**Taza Café 130 cc**  
*Coffee Cup 4,4 oz*  
Peso/Weight 167 gr  
U. Caja/U. Box 24  
0003400510002

**19,28€**  
**Cafetera-Tetera c/tapa 600 cc**  
*Coffee-Tea Pot w/lid 20,291 oz*  
Peso/Weight 455 gr  
U. Caja/U. Box 12  
0003400970002

**12,71€**  
**Tetera N° 2 c/tapa 300 cc**  
*Tea Pot N° 2 w/lid 10,14 oz*  
Peso/Weight 377 gr  
U. Caja/U. Box 12  
0003400960002

**3,42€**  
**Tapa Tetera**  
*Lid Tea Pot*  
Peso/Weight 99 gr  
0003402830002

**11,99€**  
**Cafetera c/tapa 300 cc**  
*Coffee Pot w/lid 10,14 oz*  
Peso/Weight 286 gr  
U. Caja/U. Box 12  
0003400990002

**3,42€**  
**Tapa Cafetera**  
*Coffee Pot*  
Peso/Weight 75 gr  
0003403620002

**2,78€**  
**Plato Té ø15 cm.**  
*Tea Saucer ø5,91"*  
Peso/Weight 252 gr  
U. Caja/U. Box 24  
0003400650002

**2,29€**  
**Plato Moka/Café ø12 cm**  
*Moka/Coffee Saucer ø4,72"*  
Peso/Weight 157 gr.  
U. Caja/U. Box 24  
0003400610002

**2,72€**  
**Taza Moka 70 cc**  
*Moka Cup 2,37 oz*  
Peso/Weight 135 gr  
U. Caja/U. Box 24  
0003400500002

**3,05**  
**Plato Tazón ø16 cm**  
*Saucer ø6,3"*  
Peso/Weight 358 gr  
U. Caja/U. Box 24  
0003400660002

**7,94€**  
**Plato Llano ø30 cm**  
Flat Plate ø11,81"  
Peso/Weight 910 gr  
U. Caja/U. Box 6  
0010600060002

**4,62€**  
**Plato Llano ø27 cm**  
Flat Plate ø10,63"  
Peso/Weight 655 gr  
U. Caja/U. Box 12  
0010600000002

**2,29€**  
**Taza Moka 100 cc**  
Moka Cup 3,38 oz  
Peso/Weight 122 gr  
U. Caja/U. Box 24  
0010600500002

**2,81€**  
**Taza Café 150 cc**  
Coffee Cup 5,07 oz  
Peso/Weight 133 gr  
U. Caja/U. Box 24  
0010600510002

**2,00€**  
**Plato Moka/Café ø13,5 cm**  
Moka/Coffee Saucer ø5,31"  
Peso/Weight 178 gr  
U. Caja/U. Box 24  
0010600610002

**2,67€**  
**Plato Té ø16 cm**  
Tea Saucer ø6,3"  
Peso/Weight 238 gr  
U. Caja/U. Box 24  
0010600650002

**4,02€**  
**Plato Llano ø25 cm**  
Flat Plate ø9,84"  
Peso/Weight 537 gr  
U. Caja/U. Box 24  
0010600030002

**3,89€**  
**Plato Hondo ø22 cm**  
Deep Plate ø8,66"  
Peso/Weight 492 gr  
U. Caja/U. Box 24  
0010600100002

**3,64€**  
**Plato Postre ø20 cm**  
Flat Plate ø7,87"  
Peso/Weight 418 gr  
U. Caja/U. Box 24  
0010600220002

**2,61€**  
**Plato Pan ø16 cm**  
Flat Plate ø6,3"  
Peso/Weight 216 gr  
U. Caja/U. Box 24  
0010600310002

**3,03€**  
**Taza Té 200 cc**  
Tea Cup 6,76 oz  
Peso/Weight 190 gr  
U. Caja/U. Box 24  
0010600520002

**4,28€**  
**Taza Consomé 230 cc**  
Consomme Cup 7,78 oz  
Peso/Weight 242 gr  
U. Caja/U. Box 24  
0010600540002



