

**Plato Hondo ø23 cm**  
Deep Plate ø9,06"  
Peso/Weight 530 gr  
U. Caja/U. Box 24  
0001300110000

**Plato Llano ø26 cm**  
Flat Plate ø10,24"  
Peso/Weight 682 gr  
U. Caja/U. Box 24  
0001300020000

**Plato Presentación ø31 cm**  
Show Plate ø12,2"  
Peso/Weight 1.032 gr  
U. Caja/U. Box 6  
0001300060000

**Tetera c/tapa 325 cc**  
Tea Pot w/lid 10,99 oz  
Peso/Weight 312 gr  
U. Caja/U. Box 12  
0001300960000

**Fuente Oval 33 x 21 cm**  
Oval Tray 12,99 x 8,27"  
Peso/Weight 868 gr  
U. Caja/U. Box 10  
0001300760000

**Fuente Oval 28,5 x 19 cm**  
Oval Tray 11,22 x 7,48"  
Peso/Weight 675 gr  
U. Caja/U. Box 12  
0001300750000

**Plato Postre ø20 cm**  
Flat Plate ø7,87"  
Peso/Weight 422 gr  
U. Caja/U. Box 24  
0001300220000

**Plato Llano ø24 cm**  
Flat Plate ø9,45"  
Peso/Weight 561 gr  
U. Caja/U. Box 24  
0001300050000


**Plato Llano ø28 cm**  
Flat Plate ø11,02"  
Peso/Weight 874 gr  
U. Caja/U. Box 12  
0001300000000

**Tapa Tetera 325 cc**  
Lid Tea Pot 10,99 oz  
Peso/Weight 85 gr  
0001302830000

**Rabanera 24,5 x 16 cm**  
Tray 9,65 x 6,3"  
Peso/Weight 437 gr  
U. Caja/U. Box 12  
0001300740000

**Plato Pan ø17 cm**  
Flat Plate ø6,69"  
Peso/Weight 228 gr  
U. Caja/U. Box 24  
0001300320000

**Plato Pan ø15 cm**  
Flat Plate ø5,91"  
Peso/Weight 206 gr  
U. Caja/U. Box 24  
0001300300000

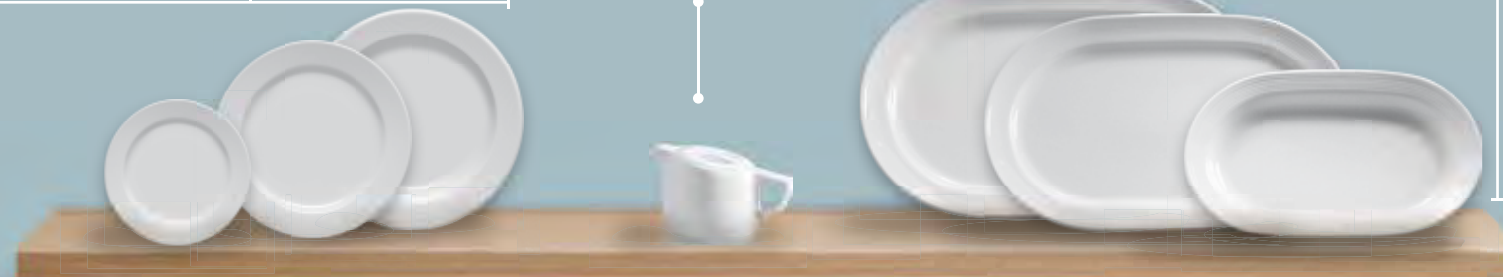

**Taza Té 135 cc**  
Tea Cup 4,56 oz  
Peso/Weight 177 gr  
U. Caja/U. Box 24  
0001300520000

**Taza Caldo 210 cc**  
Breakfast Cup 7,10 oz  
Peso/Weight 227 gr  
U. Caja/U. Box 24  
0001300550000

**Ensaladera ø18 x 5,5 cm. 950 cc**  
Salad Bowl ø7,09 x 2,17" 32,12 oz  
Peso/Weight 613 gr  
U. Caja/U. Box 8  
0001300840000

**Bol Consomé 320 cc**  
Consomme Bowl 10,82 oz  
Peso/Weight 342 gr  
U. Caja/U. Box 24  
0001300540000

**Lechera 190 cc**  
Creamer 6,42 oz  
Peso/Weight 226 gr  
U. Caja/U. Box 12  
0001303090000

**Plato Moka/Café ø12,5 cm**  
Moka/Coffee Saucer ø4,92"  
Peso/Weight 135 gr  
U. Caja/U. Box 24  
0001300600000

**Taza Moka 75 cc**  
Moka Cup 2,54 oz  
Peso/Weight 121 gr  
U. Caja/U. Box 24  
0001300500000

**Taza Desayuno 250 cc**  
Breakfast Cup 8,45 oz  
Peso/Weight 284 gr  
U. Caja/U. Box 24  
0001300530000

**Salsera ø12 x 4,5 cm 404 cc**  
Sauce Boat 4,72 x 1,77" 13,66 oz  
Peso/Weight 365 gr  
U. Caja/U. Box 12  
0001300800000

**Lechera 330 cc**  
Creamer 11,16 oz  
Peso/Weight 275 gr  
U. Caja/U. Box 12  
0001302850000

**Plato Té/Desayuno ø15 cm**  
Tea/Breakfast Saucer ø5,91"  
Peso/Weight 206 gr  
U. Caja/U. Box 24  
0001300650000

**Taza Café 100 cc**  
Coffee Cup 3,38 oz  
Peso/Weight 138 gr  
U. Caja/U. Box 24  
0001300510000



coral