

Manual de instalación – Invisible Bracket

Descripción

El sistema Invisible Bracket es un soporte oculto diseñado para la instalación de estanterías flotantes, proporcionando un acabado limpio y sin elementos visibles.

Material necesario

Soportes Invisible Bracket, taladro, brocas adecuadas, nivel, lápiz de marcaje, tornillos y tacos, llave Allen (si aplica).

Paso 1: Medición y marcado

Determinar la altura deseada, marcar una línea recta con nivel y señalar los puntos de fijación.

Paso 2: Perforación

Taladrar en los puntos marcados e introducir los tacos adecuados según el tipo de pared.

Paso 3: Instalación del soporte

Fijar los soportes con tornillos y comprobar que estén nivelados y firmes.

Paso 4: Colocación de la estantería

Insertar la balda en los soportes y ajustar hasta que quede encajada.

Paso 5: Comprobación final

Revisar nivelación, estabilidad y ausencia de holguras.

Recomendaciones

Usar tacos adecuados, no exceder el peso máximo y verificar la fijación antes del uso.

INVISIBLE MINI – BRACKET

INSTALLATION INSTRUCTIONS

INSTALLATION KIT INCLUDES:

Reusable installation template,
pre-applied 3M double-sided adhesive tape & key

SUPPLIES NEEDED:


Universal cleaner/detergent, isopropyl alcohol, silicone sealant,
clean/dry cloths, level, pencil, tape, gloves, measuring tape

Mount using pre-installed 3M double-sided ADHESIVE TAPE.

*If mounting to a surface that has a gel coat finish, the mounting area should be treated with 3M VHB Tape Universal Primer UV, as per the instructions provided with primer.

*Refer to the Reusable Installation Template (included) for proper bracket alignment and spacing.

 These steps are **CRITICAL** for proper adhesion.

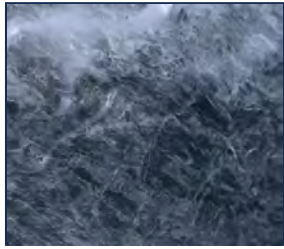

STEP 1: Locate a flat, leveled area for mounting the bracket.



STEP 6: PRESS BRACKET FIRMLY against the wall and leaning against the bracket (**minimum** of 10 kgs force). Hold pressure FOR 30 SECONDS to secure to wall.



STEP 2: Using a clean cloth, wipe the surface with detergent to remove all soap film and dirt.

Pat dry.



STEP 7: Place a line of caulking adhesive around the bracket to prevent grime from getting behind the bracket.




STEP 3: Using a new clean cloth, wipe the surface with Isopropyl Alcohol and pat dry.



STEP 8: Wait for 24 hours before inserting the bottles to allow for tape and caulking to set.



STEP 4: Use Installation Template to identify bracket placement (we suggest at a height of 100cm -110 cm from the floor). Use a level to align, then place tape on all 4 corners to hold the template to the wall in the desired position.

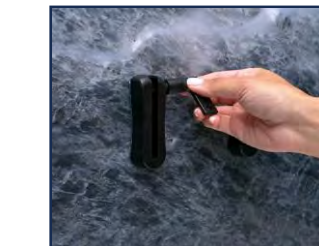

STEP 9: Installing the bottles. Make sure the bracket is in the open (or unlocked) position by inserting the key and turning **COUNTERCLOCKWISE**



STEP 5: Carefully remove the film cover.

Align and insert bracket into die-cut opening of the Installation Template.



STEP 10: Lock each bracket by inserting the key and turning **CLOCKWISE 90°**.

Save keys in a secure location for future use.

INVISIBLE MINI – BRACKET

INSTALLATION INSTRUCTIONS


FOR ENGINEERING: Fixture Installation Instructions

“IMPORTANT INFORMATION BEFORE INSTALLING DISPENSER BRACKET SYSTEM”

Please review all operation and installation instructions with your hotel engineering department and tile and shower wall supplier/manufacturer before installing dispenser bracket system.

In no event shall Papoutsanis be liable for any damages of any sort arising out of the installation of the dispenser bracket system, whether direct, indirect, special, incidental, consequential or otherwise.

Figure 1: Reusable Installation Template (included)

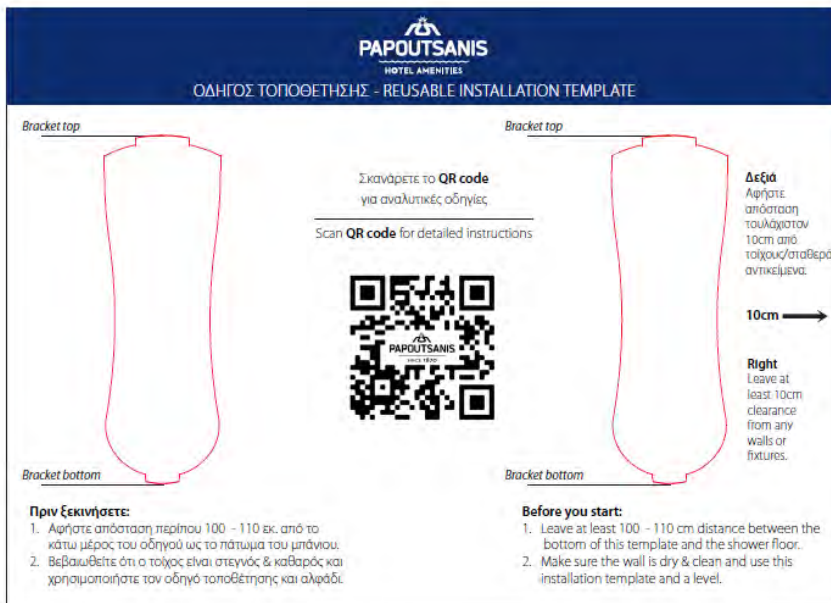

Please note that bracket top edge marks are included to help align brackets to the wall.

Leave approx. 10cm from any bathroom wall or any bathroom fixture.

In case you are replacing market's bracket(s) to Papoutsanis Invisible bracket system, follow one of the options below:

1. Either use the top hole that is already drilled and place the invisible bracket. Add double-sided tape along with the top screw for better stabilization. Then close the bottom hole from the old base with a sealer of the same color as the tile.
- Please note that at the height where the bottom sealed screw is located, can barely be seen as it is covered by our bottle.
2. Or use our base with the double tape and cover the 2 holes with Papoutsanis Invisible bracket System.

Removing the invisible bracket installed with 3M Adhesive Tape.

SUPPLIES NEEDED:

Universal cleaner/detergent, rubber gloves, scraper tool, dental floss, clean cloth

Note: Do not use excessive force to remove the bracket as this may damage the wall.

First remove bottles by inserting the key on the right side of the bracket and by turning it COUNTERCLOCKWISE. Remove caulk with the scraper tool.

Use dental floss to slide through the adhesive, stopping at the base of the bracket. Remove the bracket.

Use the scraper tool to carefully remove any remaining residue on the wall.

Disinfect the surface using a clean cloth. Be sure the solvent is approved by the manufacturer of the wall substrate and will not cause damage to the wall.

INVISIBLE MINI – BRACKET

OPERATION INSTRUCTIONS

FOR HOUSEKEEPING:
Bottle Refill & Replacement

DO NOT USE abrasive cleaning chemicals, abrasive acidic cleaning chemicals or abrasive cleaning sponge or cloth.

IMPORTANT
WAIT AT LEAST 24 HOURS after
 bracket installation before installing bottles.

Bracket Operation



STEP 1: NOTE! A low-line on the bottle indicates when the product is running low, and the bottle should be refilled (or replaced).



STEP 5: Screw the pump back onto the bottle.



STEP 2: Align and insert the key into the lock slot. Make sure that the bracket is in the open (or unlocked) position to remove the bottle(s).



STEP 6: Disinfect again the surface.



STEP 3: Use the gloves and disinfect the working surface.



STEP 7: Lock each bracket by inserting the key and turning it **CLOCKWISE 90°**.



STEP 4: Place the bottles on the disinfected surface. Fill the product defined on the front and back label. Ensure sufficient space in the bottle for the pump to be screwed back on without causing any overflow.



STEP 8: NOTE! The reuse of the dispensers for health reasons and to avoid the growth of microbes should not be used beyond a three-month period. After that time, the dispensers should be replaced.

INVISIBLE MINI – BRACKET

CARE INSTRUCTIONS

These guest room accessories are handcrafted and require special care for long term employment.

CAUTION: DO NOT USE

- Abrasive cleaning chemicals
- Acidic cleaning chemicals
- Abrasive cleaning sponge / cloth

RECOMMENDED CLEANING INSTRUCTIONS



Use clean damp cloth with mild soap to gently wipe down the bracket, bottles & pump spouts.



Wipe with clean damp cloth to remove soap.



With a dry clean cloth, wipe off all cleaned areas to remove water spots.

INVISIBLE MINI – BRACKET
SCREW MOUNTING

INSTALLATION INSTRUCTIONS

INSTALLATION KIT INCLUDES:

Reusable installation template,
Anchors, screws & key


SUPPLIES NEEDED:

Universal cleaner/detergent, isopropyl alcohol, silicone sealant, clean/dry cloths, level, pencil, tape, gloves, measuring tape, screwdriver, electro drill

Mount using provided anchors and screws.

*Refer to the Reusable Installation Template (included) for proper bracket alignment and spacing.

 These steps are **CRITICAL** for proper adhesion.

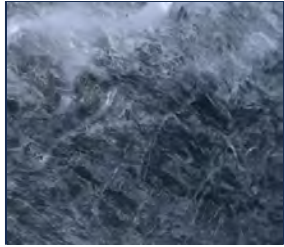

STEP 1: Locate a flat, leveled area for mounting the bracket.



STEP 6: Use the same template to install multiple brackets.



STEP 2: Using a clean cloth, wipe the surface with detergent to remove all soap film and dirt.

Pat dry.



STEP 7: Place a line of caulking adhesive around the bracket to prevent grime from getting behind the bracket.



STEP 3: Using a new clean cloth, wipe the surface with Isopropyl Alcohol and pat dry.



STEP 8: Wait for 24 hours before inserting the bottles to allow for tape and caulking to set.



STEP 4: Use Installation Template to identify bracket placement (we suggest at a height of 100cm -110 cm from the floor). Use a level to align, then place tape on all 4 corners to hold the template to the wall in the desired position.



STEP 9: Installing the bottles. Make sure the bracket is in the open (or unlocked) position by inserting the key and turning **COUNTERCLOCKWISE**



STEP 5: Carefully mark the position of each screw hole with a pencil. Drill the holes and install the provided anchors to secure the screws.

Put the bracket into position and use the screwdriver to tighten the screws in the holes.



STEP 10: Lock each bracket by inserting the key and turning **CLOCKWISE 90°**.

Save keys in a secure location for future use.

INVISIBLE MINI – BRACKET

INSTALLATION INSTRUCTIONS


FOR ENGINEERING: Fixture Installation Instructions

“IMPORTANT INFORMATION BEFORE INSTALLING DISPENSER BRACKET SYSTEM”

Please review all operation and installation instructions with your hotel engineering department and tile and shower wall supplier/manufacturer before installing dispenser bracket system.

In no event shall Papoutsanis be liable for any damages of any sort arising out of the installation of the dispenser bracket system, whether direct, indirect, special, incidental, consequential or otherwise.

Figure 1: Reusable Installation Template (included)

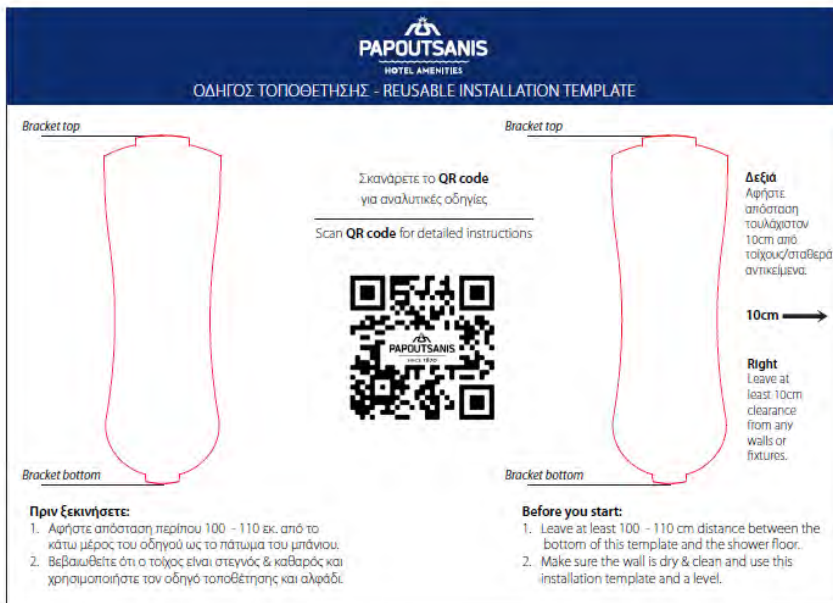

Please note that bracket top edge marks are included to help align brackets to the wall.

Leave approx. 10cm from any bathroom wall or any bathroom fixture.

In case you are replacing market's bracket(s) to Papoutsanis Invisible bracket system, follow one of the options below:

1. Either use the top hole that is already drilled and place the invisible bracket. Add double-sided tape along with the top screw for better stabilization. Then close the bottom hole from the old base with a sealer of the same color as the tile.
2. Or use our base with the double tape and cover the 2 holes with Papoutsanis Invisible bracket System.

INSTALLING MULTIPLE BRACKETS:



Use tape on all 4 corners to install the template to the wall in the desired position.



Use the bracket to mark the drill holes on the wall.



Use the same template to install multiple brackets.

INVISIBLE MINI – BRACKET

OPERATION INSTRUCTIONS

FOR HOUSEKEEPING: Bottle Refill & Replacement

DO NOT USE abrasive cleaning chemicals, abrasive acidic cleaning chemicals or abrasive cleaning sponge or cloth.

IMPORTANT
WAIT AT LEAST 24 HOURS after
bracket installation before installing bottles.

Bracket Operation



STEP 1: NOTE! A low-line on the bottle indicates when the product is running low, and the bottle should be refilled (or replaced).



STEP 5: Screw the pump back onto the bottle.



STEP 2: Align and insert the key into the lock slot. Make sure that the bracket is in the open (or unlocked) position to remove the bottle(s).



STEP 6: Disinfect again the surface.



STEP 3: Use the gloves and disinfect the working surface.



STEP 7: Lock each bracket by inserting the key and turning it CLOCKWISE 90°.



STEP 4: Place the bottles on the disinfected surface. Fill the product defined on the front and back label. Ensure sufficient space in the bottle for the pump to be screwed back on without causing any overflow.



STEP 8: NOTE! The reuse of the dispensers for health reasons and to avoid the growth of microbes should not be used beyond a three-month period. After that time, the dispensers should be replaced.

INVISIBLE MINI – BRACKET

CARE INSTRUCTIONS

These guest room accessories are handcrafted and require special care for long term employment.

CAUTION: DO NOT USE

- Abrasive cleaning chemicals
- Acidic cleaning chemicals
- Abrasive cleaning sponge / cloth

RECOMMENDED CLEANING INSTRUCTIONS



Use clean damp cloth with mild soap to gently wipe down the bracket, bottles & pump spouts.



Wipe with clean damp cloth to remove soap.



With a dry clean cloth, wipe off all cleaned areas to remove water spots.