

TS 301



A300073











Technical data

- Name: • **Serving-/transport trolley TS 301 with 3 shelves**
- Code-No.: • **A300073**
- Material: • Nickel-chrome steel
- Design: • Frame made of round tubes Ø 25,8 mm;
Shelves: 3, dimension:
W 827 x D 510 mm
4 swivelling rubber castors, Ø 100 mm
1 buffer, 2 swivelling castors with stoppers
Easy assembly
- Dimensions: • W 920 x D 600 x H 945 mm
- Maximum carrying capacity: • 90 kg, 30 kg per shelf
- Distance between shelves: • 265 mm
- Weight: • 13.4 kg
-

We reserve the right to make technical changes!


- Unpack the individual elements and remove the packaging material.
- Check completeness of delivery according to the list below.

Scope of delivery / Part name


Element	Number	Name
	3	Shelf
	2	Frame
	2	Castors without stoppers
	2	Castors with stoppers
	4	Buffers for castors
	12	Mounting angle
	12	Hexagon socket screws
	12	Lock nut
	1	Allen wrench
	1	Wrench

Assembly

1. Start the assembly of the serving / transport trolley from fixing the shelves to the frame. Insert the mounting angles inside the corners of the frame. Screw them tight with the use of an Allan wrench and the wrench and the included hexagon socket screws and the nut.

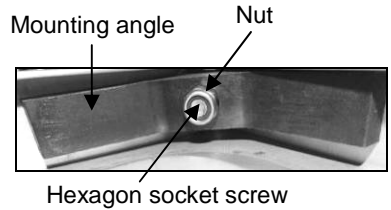

2. Lay the serving / transport trolley on its side and attach castor buffers to the frame. Finally, next, screw 4 swivel castors into the frame.

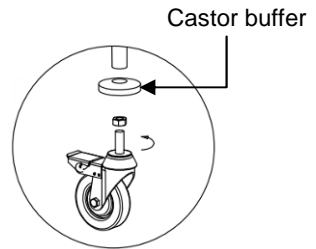

3. Carefully place the serving / transport trolley on the floor and make sure that all swivel castors touch the surface. The serving / transport trolley may be aligned by adjusting swivel castors. Secure their position with lock nuts.



NOTE!

Remove the protective foil after the assembly!

4. When the serving / transport trolley is in the desired location, block the swivel castors with brakes, to prevent it from being accidentally moved or tipped.

Cleaning instructions

- The serving / transport trolley should be regularly cleaned with a moist cloth and mild cleaning agents.
- **Never** use harsh cleaning agents that may damage the surface of the serving / transport trolley.
- Dry the serving / transport trolley with a soft cloth.